

REMOTE CONTROL TOTALIZER (RCT)

Congratulations on your purchase of our remote control totalizer (RCT).

The RCT is designed to remotely turn your copier ON and OFF, as well as count the copies made on it.

The RCT turns the copier ON and OFF with a keyswitch, so that at any time you can turn it OFF for an extended period, without fear that copies will be made in your absence.

The key is removable in either the ON or OFF position: don't leave the key in the unit.

When copies are made, the digital counter increments. When a user is finished making copies, press the red button to reset the counter to start over.

Your RCT comes with extended cabling that can be routed in a discreet way. At the end of the cabling, use the supplied copier specific harness (sprig) to hook the RCT up to the copier.

Your RCT has velcro on the bottom for easy mounting, but you can take it off and use the tear drop holes for a more permanent mount.

To replace batteries, use this diagram:

DIMENSIONS In inches (mm), INSTALLATION & BATTERY INSERTION

Installation Environment

The unit should be installed in a location that does not exceed the maximum operating temperature and provides good air circulation. Placing the unit near devices that generate excessive heat should be avoided.

The bezel should be cleaned only with a soft cloth and neutral soap product. Do NOT use solvents. Continuous exposure to direct sunlight may accelerate the aging process of the bezel.

Do not use tools of any kind (screwdrivers, pens, pencils, etc.) to operate the keypad of the unit.

